


Mounting instruction, Monitorlift 450-2

1.

Make the cut-out *** in the tabletop and drill holes $\varnothing 10$ (x4) holes for M6 plastic inserts (supplied along with the product). Depth of holes = 15mm.

*** max. width of cut-out = 480mm

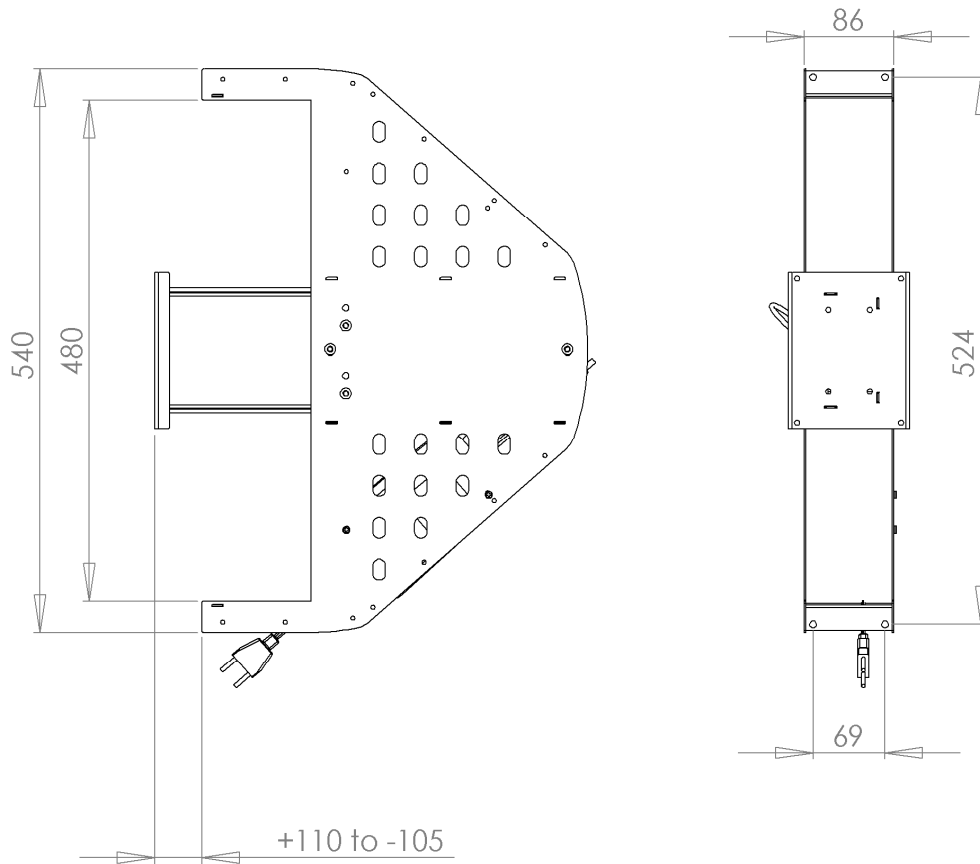

2.

Mount the Monitorlift to the tabletop plates (screws supplied along with the product) and connect wires between Controlbox and Monitorlift.

