


**IMPORTANT**

Make sure to unplug the table before starting this operation. Only plug again when told in this manual


If the table legs don't run in synch, it might be due to problems with the electrical connections or electronic parts. Please follow the instructions below.

**HOW TO:**

1. Check if minimum one of the legs are connected to M1 (motor 1) in the black electronic synch box.  
If not, reconnect the wires and test the table again.

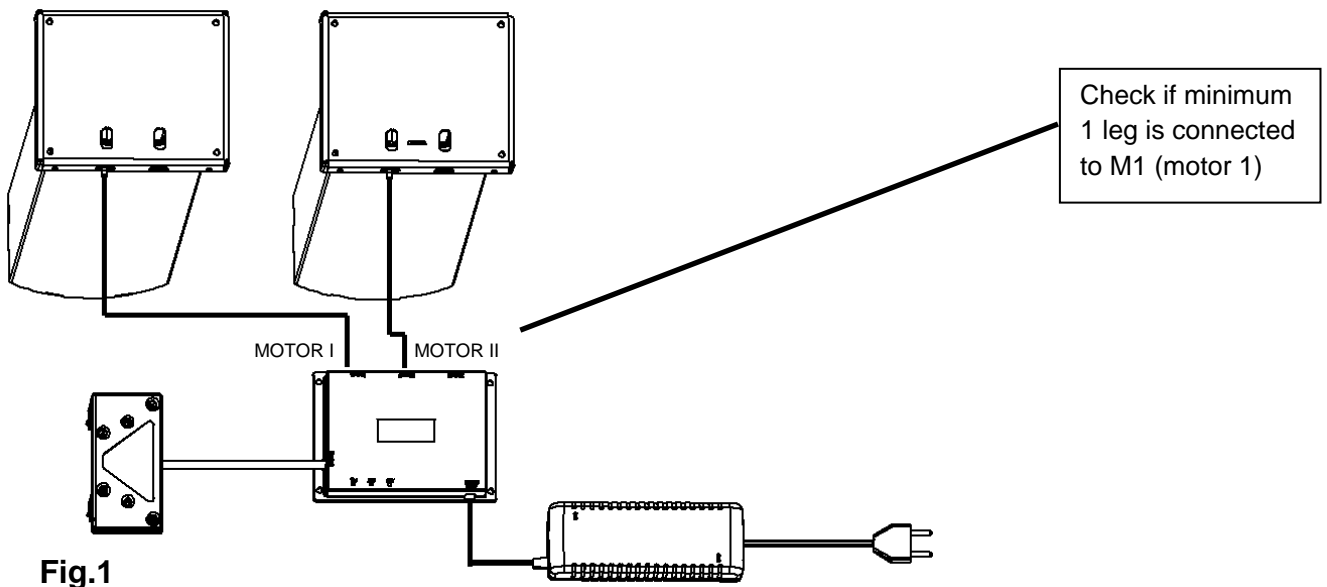

2. Check the 6-pin wire plugs of both columns (legs).  
If some metal pins are not correctly fitted, push them into the plastic plug housing again and test the table again.

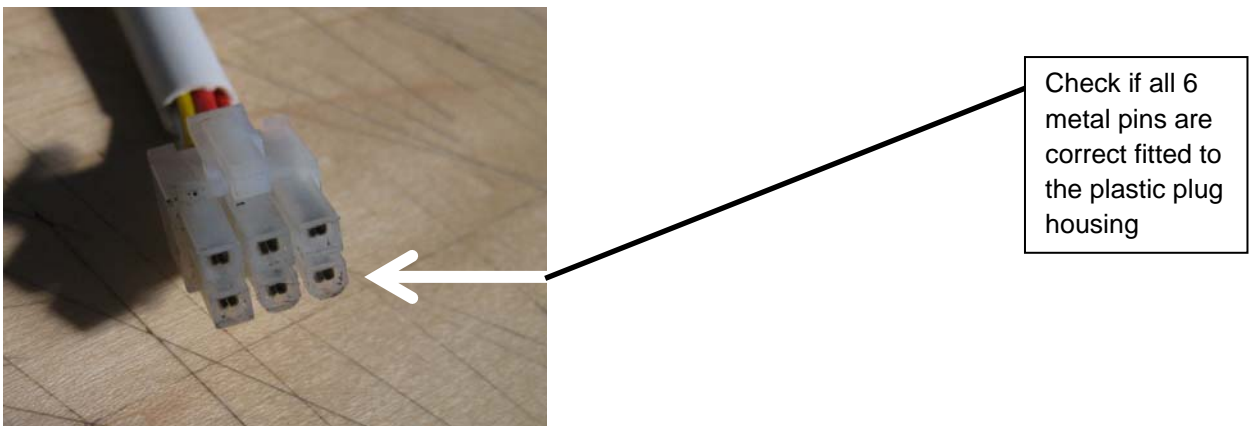

3. Is there a green light in all 3 diodes of the black electronic synch box?  
If some red lights are on, please turn of the power for 5 minutes, remove some load from the table and test the table again.



Green light in  
all 3 diodes?

**Fig.3**

4. If you are a ConSet dealer, distributor or importer, you might have other columns on stock. Please use another column to find out which of the columns cause the problem in the defect table. If you find out one of the columns are defect, we will replace it.

**NEED HELP?**

Contact us on [conset@conset.com](mailto:conset@conset.com) for further assistance